


OWNER'S GUIDE BOOK

TOSHIBA

MICROWAVE OVEN

ER-669ET

WITH TURN TABLE

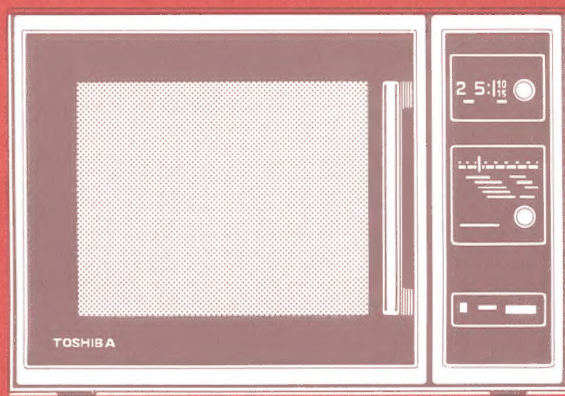

Features of the Microwave Oven

Door Screen


The wire net screen allows you to see food while it's cooking. The screen is designed so that light can pass through, but not the microwaves.

Door Screen Cover

The plastic cover over the screen is an additional safety feature, designed to prevent anything from accidentally being put through the perforations in the Door Screen.

Automatic Door Latch

To open, pull handle and swing door to left. When door is closed, the latch will automatically lock it shut.

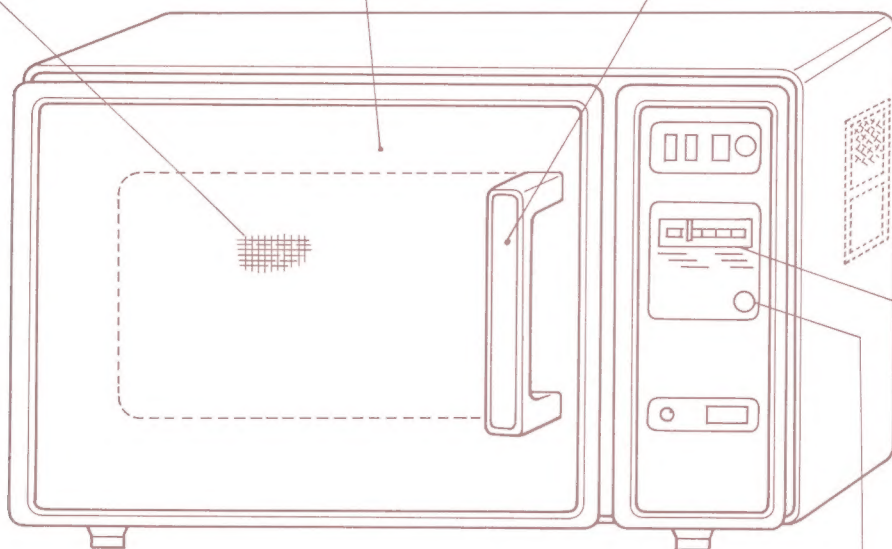

Power Level Selector

Power level selector infinite power setting between "1" and "9". To set, simply turn knob to desired number or anywhere between numbers in the indicator.

Power Level Indication

Power level indicator illustrates the power level from "1" to "9" (Full Power).

Air Filter

Located at the back of the Oven, the filter allows air to be drawn into the Oven during cooking, and keeps out dust and lint.


Model ER-669ET

Spatter Shield

Protects the ceiling of the Oven and the magnetron from any spatter from cooking foods.

Timer

It must be set each time oven is used. Divided into convenient 5 second divisions, timer may be set up to 59 minutes and 45 seconds. Oven will automatically shut off when it returns to "0".

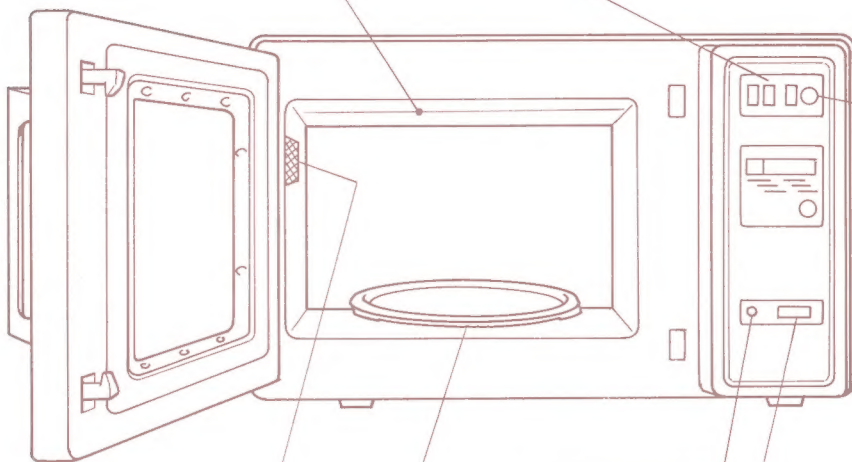

Oven Light

When the timer dial is turned the oven light comes on.

Timer Knob

Timer knob is to set timer.

Revolving Tray

This helps the food receive a more even distribution of microwaves top, sides and bottom. It can itself serve as a cooking utensil.

Cook Button

This turns on the magnetron and the cooking process begins. If the door is opened during cooking, the Cook Button must be pushed again to restart the Oven.

Cooking Light

This light will glow orange when the magnetron is operating. It is activated when the Cook Button is pushed.

Installation

WARNING

THIS APPLIANCE MUST BE EARTHED

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Green-and-yellow :	Earth
Blue :	Neutral
Brown :	Live

As the colours of the wires in the mains leads of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol or coloured green or green-and-yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

If the appliance is not connected through a plug and socket, then a double-pole switch should be provided in the installation.

Please keep the oven at least 3 cm away from adjacent walls to ensure correct ventilation.

Make sure all packaging material is removed from inside the door.

Placement

1. The Microwave Oven weighs 26.5 kg (58 lbs.) and must be placed on a horizontal base strong enough to support this weight.
2. The Oven should be placed as far as possible from high temperature and vapour.
3. The power source cord is 2.0 m (6.7 ft.) long, the power source receptacle therefore is to be set within reach of this cord. Earthing is required when connecting the power source.
4. Do not place anything on this Oven.
5. This Oven requires 1.22 KVA for its input, consultation with service engineer is suggested when installing (including voltage adjustment) the Oven.

CAUTION:

"This unit is protected internally by a 250V 10A Fuse."

Operation

This Toshiba Microwave Oven is extremely easy to operate. Just follow the instruction given below.

1. Unlock the door by pulling out on the door handle. The oven cannot operate when the door is open.
2. Place the food, or food in its container, on the cooking tray.
3. Close the door. The latch will snap shut, automatically locking the oven door. If door is not closed properly, the oven will not start.
4. Set timer to desired cooking time. The oven light and the cooling fan to the magnetron tube will turn on.
5. Select the proper power level by turning the Power Level Control Knob to the desired setting. Full Explanation of appropriate power level is given in Cookbook.
6. Push Cook Button. This starts the cooking process in the oven, and turns on the cook light. The timer starts returning to "0". If the door is opened while the oven is operating the magnetron tube will automatically shut off. It will not restart until door is closed and the cook button is pushed again. This will also restart the timer.
7. When the timer returns to "0" the cooking cycle will automatically stop. The cooking light, oven light and cooling fan will go off.
8. Remove food from oven.

TO SET TIMER:

- a) Turn timer knob clockwise to desired number of minutes.
- b) Push and turn timer knob clockwise to desired number of seconds.

Note: The timer will rotate either clockwise or counterclockwise. To set longer times, simply rotate the timer knob backwards to desired time.

- c) The timer is activated only when the oven is operating and the cook light is on.

Note: The oven light and cooling fan does not go off unless the timer has returned to zero.

When you place the Cooking Tray into the oven, make sure the turning shaft engages with the hollow provided under the tray. Do not rotate the Cooking Tray by hand forcibly.

Warning

- (a) Do not place any object between the oven front face and the door.
- (b) Do not operate the oven if it is damaged.
- (c) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

The TOSHIBA Microwave Oven is designed to give long, safe and satisfactory service. With it as with many electrical appliances, there are some basic rules to follow to assure peak performance.

1. Visually check appliance after unpacking. Be sure to remove all packing material from the Oven cavity and inside of door. Inspect the Oven for any visual damage. Any and all damage should be reported to your TOSHIBA dealer. He will inform you if there is any reason why you should not use it.
2. Do not operate the unit if the door gasket or seal is damaged and door does not close securely.
3. Do not allow anyone to service the machine other than an authorized TOSHIBA service station. To do so would void the warranty. Never, under any circumstances, remove the outer case, door or control panel.
4. Do not operate without food in the oven, operation in this manner being likely to damage this unit.
5. Never use a metal container or a container with gold or silver lining since they discharge electricity. Porcelain, glass or paper are suitable as containers.
6. Do not use the Oven for any other purpose than cooking (e.g. Drying clothes.)
7. When cooking food in a bottle package or sealed container, make sure that the cap or seal is removed or the package pierced. Otherwise it may cause an explosion in the cavity.
8. Do not cook eggs in the shell. The expansion and build up of pressure could cause the egg to explode. After cracking and removing egg from shell always pierce yolk with a toothpick prior or skewer to frying, poaching or hard cooking.
9. When cooking food with a shell such as a chestnut, make a split in the shell with a kitchen knife.
10. Don't overcook food excessively. If food is overcooked, it dries out, and can even ignite in some cases.
11. Do not operate without food and revolving tray. Otherwise the parts in the oven may be damaged.

Cleaning and Maintenance

There is never a problem in cleaning the Microwave Oven. Most of the time you can just wipe the inside of the Oven with a soft damp cloth and mild detergent. Rinse, wipe out well and dry!

- To keep the oven in top operating condition, wipe out with a damp cloth after each use. This keeps dried-on food spatter from absorbing any of the cooking energy. Always use a soft cloth, never an abrasive powder or pad. Should any food particles dry on the interior of the oven, place a pint size heat resistant jug, containing about 1-1/2 cups of water in the centre of the oven. Turn the oven on and let the water boil for about 3 minutes or until a film of moisture forms on the interior of the oven. Turn the oven off. The dried-on food particles should now be soft and can be removed with a soft damp cloth.
- It is important that the door seal is tight and be kept clean at all times. Never allow food to build-up around it. To keep it clean, wipe out with a damp cloth after use. The area around the hinges should be carefully cleaned.
- The cooking tray can be removed from the Oven and washed either by hand or in the dishwasher. Handle with care—it's porcelain, therefore breakable! The cooling tray should always be in place when the Oven is in use.
- The spatter shield can be wiped off with a damp cloth. It is not necessary to remove it. It is important that this shield be kept clean at all times. Food spatter should be wiped off after each use.
- The outer casing of the Oven should not be removed—Except by an authorized TOSHIBA serviceman. Its removal can void the warranty.
- The Door Screen cover can be wiped with a soft cloth, warm water and a mild detergent. Do not use abrasive cleaners as they will scratch the surface.
- Clean the air filter according to your usage of the Oven —usually every month or two. It's on the back of the Oven,. Pull it out, wash in warm water and mild detergent, dry well and slide it back into place.